




**QUICK START GUIDE**

1. Place the machine on a firm even surface.
2. Insert the hod, pushing down very firmly until it clicks. Plug in the AC adapter (charging takes approximately 3 hours).
3. Ensure the hod is empty then press  key.
4. Place empty till cup/coin scoop on scale (coin scoop should not be placed on the device before turning on).


**FAST KEY FUNCTIONS**


**Auto-Add**


 Press the "F" and the "+" keys. "+" will be displayed on screen if auto-add is activated.




**Contrast**


 Press and hold the "F" and "C" keys, and press either "Up" key (to increase) or "Down" key (to decrease) the contrast.








**Auto-Scroll**

 Press the "F" and the "-" key. "▲" will be displayed on the screen when auto-scroll is activated.



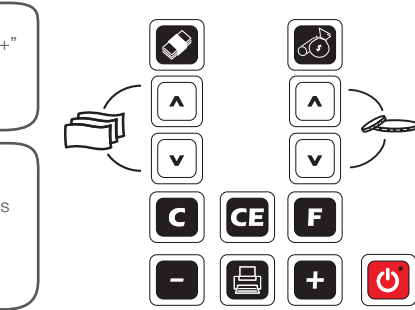



**Switch Currency**

 Press the "F" and the "Coin Up" keys to toggle between the different currencies.





**Float Selection**


 Press the "F" and the "Coin Up" keys. Use any of the arrow keys to select float. Press "+" key to accept.




**Float Value Setting** Press the "F" and the "Note Up" keys. Then press any arrow key to select a float. Use the "+" key to select the digit to be adjusted. Then use any arrow key to decrease or increase the amount. Press "F" key to save. To exit, press the "Packaged Notes" key.












**Calibrate Scoop/Till Cup**

 Press the "F" and the "ON/OFF" keys, then follow the on screen instructions.

 







**COUNTING LOOSE NOTES OR COINS**



1. Only single denominations can be counted at one time. Denominations cannot be mixed.
2. **COINS:** Press either coin   key to select coin counting mode and the required denomination. Place coins into the till cup/scoop and then onto the hod.  
**NOTES:** Press either note   key to select note counting mode and the required denomination. Place notes on the hod (up to 30 notes at one time).
3. Remove notes/coins from the hod and the machine will automatically advance to the next denomination and add counted value to grand total.

**COUNTING PACKAGED NOTES OR COINS**



1. **COINS:** Press the  key to select packaged coins counting mode.  
**NOTES:** Press the  key to select packaged notes counting mode and the type of package.
2. Place a bag of coins or a pack of notes on the hod.
3. If the bag of coins or bundle of notes are "good", the value will automatically add to the total.
4. **COINS:** If the word "suspect" is displayed on the screen, select the denomination of coin using the coin  or  key. Press the  key to accept and add to the total.  
**NOTES:** If the packaged notes appears as "suspect", remove band from bundle notes and count in loose note mode.
5. The Cashmaster will automatically advance to the next denomination.